




BeM LINK

Supporto adattatore per test di funzionamento, simulazione impianto elettrico e accessori vettura per unità Blue&Me di prima e seconda generazione (Convergence Marelli e Lauberhorn)

Essential for performing repairs on Blue&Me units and check their operation on the bench

POTRETE GARANTIRE IL SUCCESSO DELLA RIPARAZIONE AL 100%

BeM LINK is available in two versions, with main power jack (8a) for external power supply or with main power cable (8b) for additional power supply

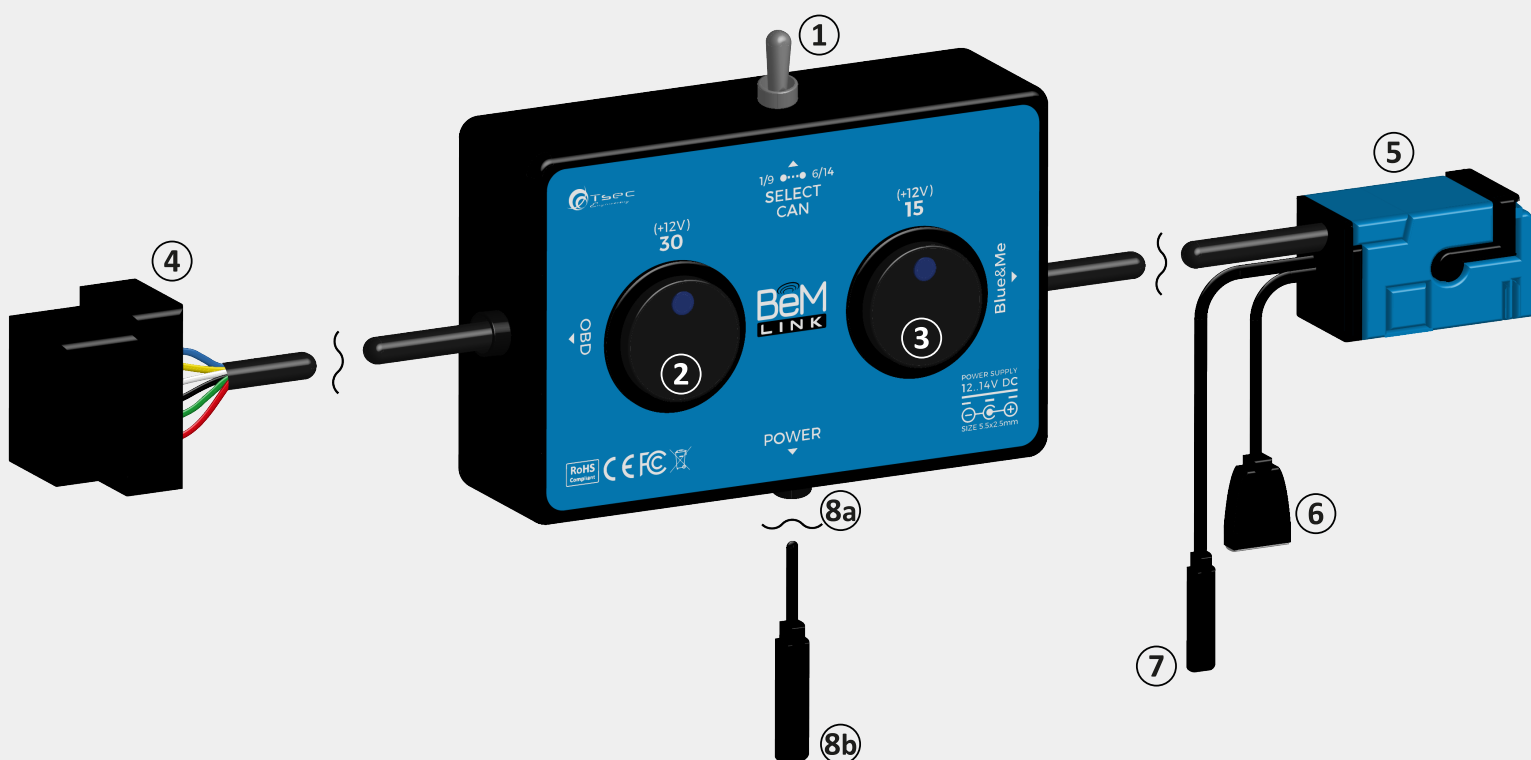

WHAT CAN YOU DO?

- ① Switch CAN
- ② Power ON (+30)
- ③ Ignition (+15)
- ④ OBD Connector
- ⑤ Blue&Me Connector
- ⑥ USB Plug
- ⑦ Jack Audio TRRS
- ⑧a Main power jack
- ⑧b Main power cable

- Connect a **generic diagnostic** to perform the **function test** and view the unit's operating parameters.
- Connect a USB Mass Storage device and perform, for example, the **language change, configuration information retrieval, updates, etc.**
- Via the TRRS audio jack you can **listen and/or give voice messages**

BeM LINK

Instruction for use

1 Switch CAN 1/9 ●---● 6/14

CAN selector switch to switch Blue&Me connection pins with diagnostic socket

Select:

1/9 → CAN-LS a 29 bit
Body Delphi Flx - Marelli BCM

6/14 → CAN-B a 11 bit
Body Marelli NBC

2 Power ON (+30)

The switch connects the power supply to the permanent of the Blue & Me connector (5)

FIG.1 If the power source is the main power jack (8a) / Cable (8b), this also powers the OBD connector (4)

Power supply from main power jack (8a) / cable (8b)


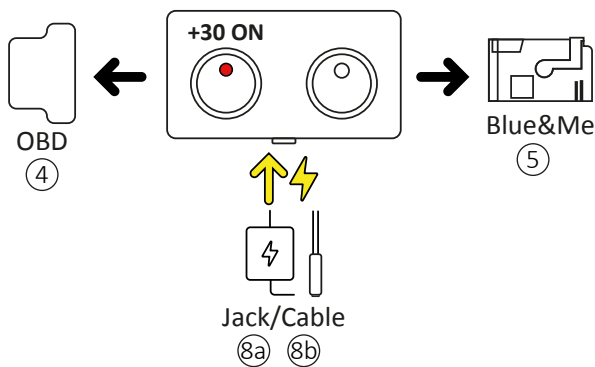


FIG.2 You can also use the OBD connector (4) as the only power source

Power supply from OBD connector (4)

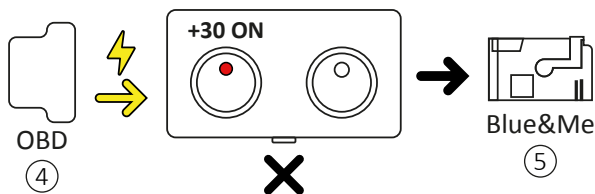

3 Ignition (+15)

The switch connects the power supply to the sub-key of the Blue&Me connector

note: To bring the power supply to +15 (3), the +30 switch (2) must also be active

4 OBD Connector

Connector for diagnostic interface connection

5 Blue&Me Connector

Connector for connection with Blue&Me module


6 USB Plug

Simulates the USB connector on the car. Use with a FAT32 USB stick max 256 GB (not included) to perform updates, language changes, configuration information retrieval, etc.


7 Jack Audio TRRS (3.5mm)

Jack Audio 4C TRRS (3.5mm) Standard CTIA for connection with headphones (included) or pre-amplified speakers and microphone (not included)

Headphones connection (included)

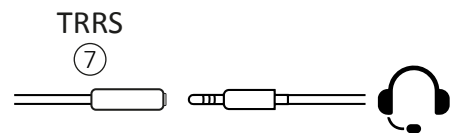

Connection to pre-amplified speakers (not included)

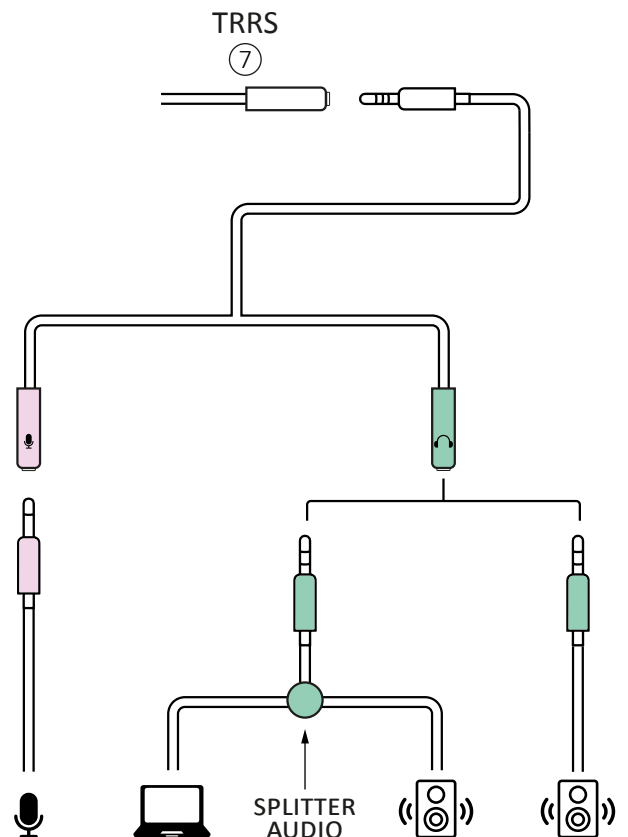

8a 8b Main power jack/cable (5.5 x 2.5 mm)

Connection for power supply 12..14V DC max 3A